



# Operator's Manual

## **ServerLIFT *SL-500X*® Electric Data Center Lift**

Serial #: \_\_\_\_\_

## **NOTICE**

**ONLY ORIGINAL SERVERLIFT  
REPLACEMENT PARTS SHALL BE  
USED FOR ANY REPAIR.**

# Contents

www.serverlift.com

<b>Introduction</b>	<b>4</b>
Included with the SL-500X device	4
<b>Legend</b>	<b>5</b>
<b>Set Up</b>	<b>7</b>
Before you begin	7
Pre-operation Inspection	7
Function Tests	7
<b>Instructions</b>	<b>11</b>
Before operating the ServerLIFT unit	11
Operating Steps	11
Stabilizer Brake Operation	12
Applying Load To The Platform	13
Front Caster Swivel Lock Operation	13
Safety Directions	14
<b>Attachments</b>	<b>17</b>
PL-500X™ Platform Extension	17
LE-500X™ Lift Extension	24
RL-500™ Platform Riser	28
RS-500X™ Rail Lift	29
<b>Maintenance</b>	<b>33</b>
Schedule of Maintenance	33
Battery Charging	34
Panel Access Door	35
Testing Battery Charge	35
Battery Replacement	36
Stabilizer Brake Boot Replacement	38
Pulley and Cable Inspection	39
<b>Specifications</b>	<b>40</b>
Features	40
Dimensions and Capacity	42
<b>Troubleshooting</b>	<b>43</b>
<b>Warranty</b>	<b>48</b>
<b>CE Declaration</b>	<b>50</b>
<b>FCC Declaration</b>	<b>52</b>

## ServerLIFT LLC

17453 N 25th Ave | Phoenix, AZ USA 85023  
(602) 254-1557 | Fax: (602) 254-1975



**Service & Support:**  
[support@serverlift.com](mailto:support@serverlift.com)

**Shipping/Receiving:**  
[shipping@serverlift.com](mailto:shipping@serverlift.com)

**Sales:**  
[sales@serverlift.com](mailto:sales@serverlift.com)

© ServerLIFT LLC. All Rights Reserved.  
Information in this document subject to change without notice.

11-2024 P/N: SL-5 r.E01

## ⚠ CAUTION:


Read and completely understand the contents of this Operator's Manual before operating the ServerLIFT device. Failure to read, understand, and follow instructions in this manual may result in property damage and/or personal injury. If you do not understand any part of this manual or if you have any questions please contact ServerLIFT Service & Support.

**IMPORTANT:** Keep these instructions with the ServerLIFT device.

- Do not stand or ride on any part of the ServerLIFT device.
- Never lift or move the ServerLIFT device with a pallet truck, jack, or forklift. Use the pallet, ramp, and packaging originally received with the unit for transporting it.
- Keep hands, fingers and clothing clear of platform and mast when equipment is in motion.
- To maximize battery life, keep machine charging when not in use. Always disconnect the Power Cord from charging source before use or servicing.


**Never operate the ServerLIFT device while charging**

## Included with the SL-500X device

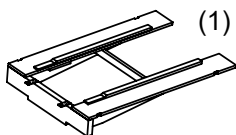


(1) Shipping Ramp

(1) Shipping Pallet  
*[includes retaining hardware]*

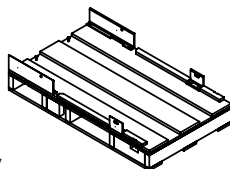

(2) Power Switch Key  
*[keep one key as a spare in a secure location away from ServerLIFT unit]*

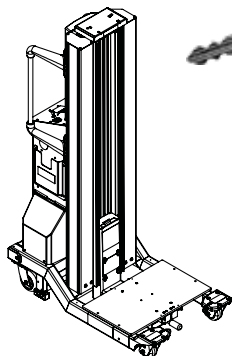

(1) SL-500X unit


(1) Operator's Manual

(1) Canvas Bag for Tie Down Straps


(2) Adjustable Tie Down Strap with hooks

(1) Ratchet with (2) sockets, 10 and 17 mm



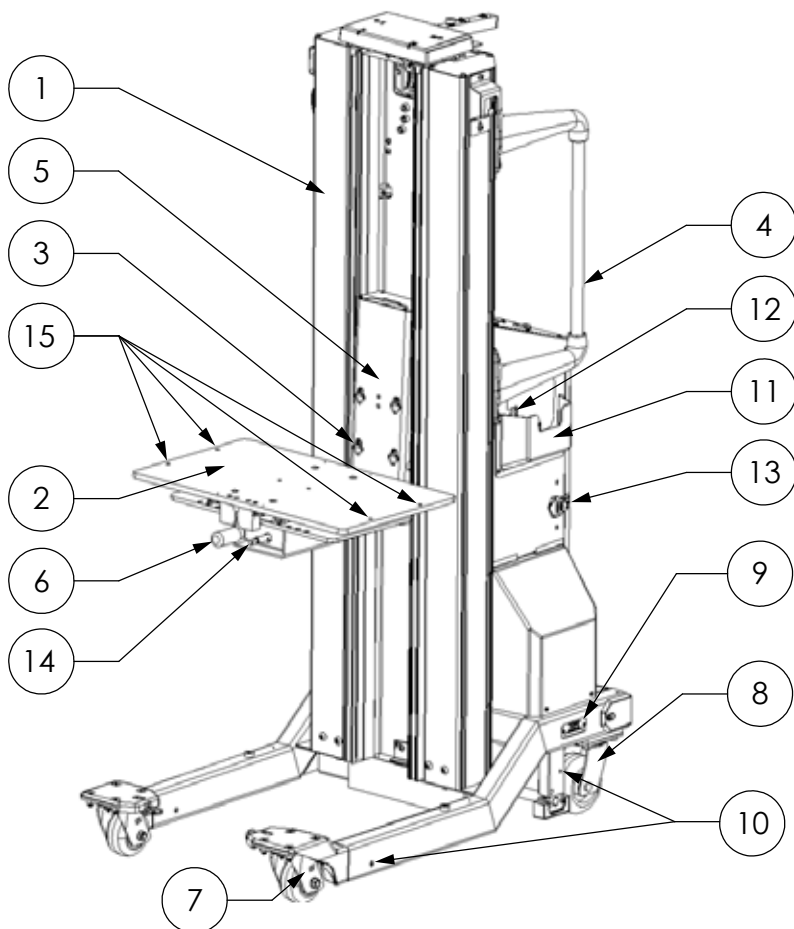

- |   |                                   |
|---|-----------------------------------|
| 1. Vertical Mast                                | 8. Casters - Free Swivel          |
| 2. Equipment Platform and Easy-Tilt Glide Shelf | 9. Serial Number Plate            |
| 3. Strap Hooks                                  | 10. Pallet Bolt Holes             |
| 4. Handle Bars                                  | 11. Power Cord Sleeve             |
| 5. Platform Mast                                | 12. Power Cord                    |
| 6. Easy-Glide Shelf Handle                      | 13. Panel Access Door Latch       |
| 7. Casters - Swivel/Lock                        | 14. Platform SmartTILT Adjustment |
|   | 15. Accessory Attachment Holes    |

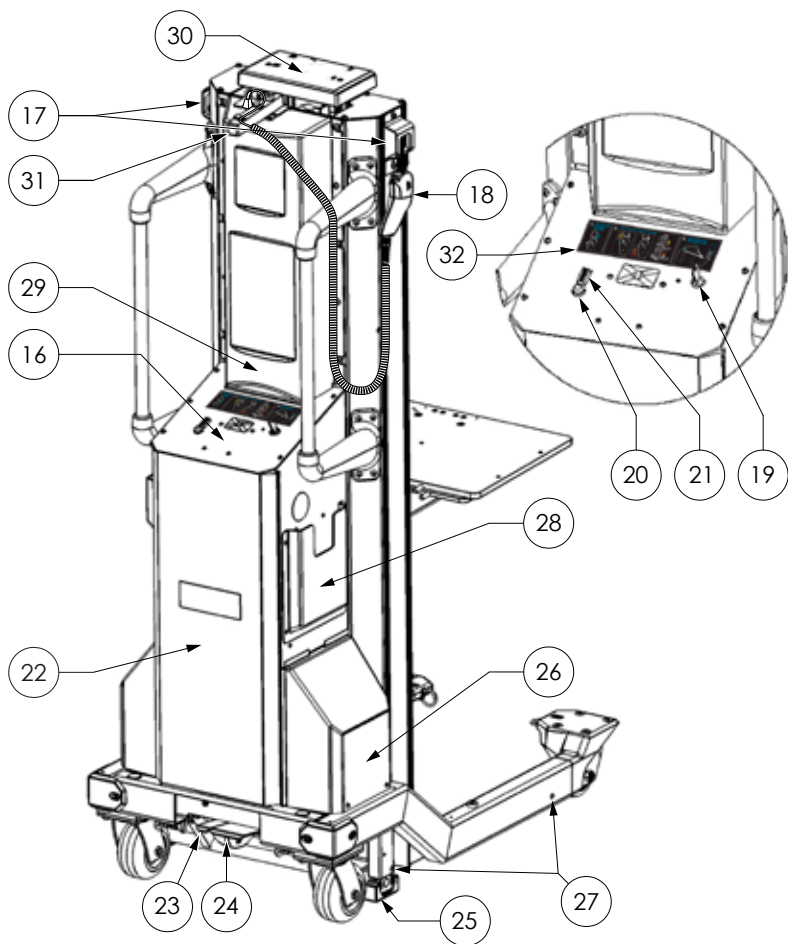

- |                                    |                              |
|------------------------------------|------------------------------|
| 16. Main Control Panel             | 25. Stabilizer Brake Pad     |
| 17. Pendant Hanger                 | 26. Winch Cover              |
| 18. Pendant                        | 27. Pallet Bolt Holes        |
| 19. Keylock Power Switch           | 28. Operator's Manual Sleeve |
| 20. Battery Charge Test Button     | 29. Upper Panel Cover        |
| 21. Battery Charge Level Indicator | 30. TouchSTOP™ Sensor        |
| 22. Panel Access Door              | 31. Swing Arm                |
| 23. Stabilizer Brake Release Pedal | 32. Pendant Instructions     |
| 24. Stabilizer Brake Pedal         |                              |

## Before you begin

1. Read and understand the contents of this manual carefully.
2. Locate the serial number plate. Record unit serial number on front page of Operator's Manual for future reference.
3. Perform ***Pre-operation Inspection***.
4. Perform ***Function Tests***.

## Pre-operation Inspection

Check the ServerLIFT device and included attachments (if applicable) for signs of damage. Fully document any damage with photos, location, and description. Promptly contact ServerLIFT Service & Support if any damage is present.

## SAVE PALLET, RAMP, HARDWARE AND PACKING CARTON!

They are needed for moving the ServerLIFT unit to other locations.

## Function Tests

Function Tests are designed to discover malfunctions before machine is used. Tests should be performed before normal operation. Before testing, select an area that is solid, level and free of obstructions.

⚠ ***Note: After testing, if malfunctions are discovered, the machine must be locked in OFF status and removed from service. Repairs to the machine may only be made by or under the directions of a service technician qualified by ServerLIFT.***

## Battery Charge

To test battery charge, press Battery Charge Test Button on Main Control Panel, activating Battery Charge Level Indicator.

There are three zones on Charge Level Indicator: DISCHARGED (red), LOW (amber), and FULL (green). If charge level is FULL, the Battery is considered fully charged.

If Battery is not fully charged, recharge it before continuing Set Up (see **"Battery Charging"** on page 34).

➡ **Note:** *Charge the Battery whenever the ServerLIFT device is not in active use to maximize battery life.*

## ⚠ CAUTION

Never plug into a wall outlet or power source that is not approved for your ServerLIFT model. See **"Battery Charging"** on page 34 for approved power source specifications.

**CHARGING BATTERY WITH UNAPPROVED POWER SOURCE OR OPERATING UNIT WHILE CHARGING WILL VOID WARRANTY AND RESULT IN PERMANENT CHARGING SYSTEM FAILURE.**

## **Stabilizer Brake Function Test**

See **"Stabilizer Brake Operation"** on page 12 for additional details.

1. Press down red Stabilizer Brake Pedal so it locks in place. The Stabilizer Brake should remain in DOWN position.

➡ **Note:** *If operating correctly, engaging the Brake will very slightly lift the back of the ServerLIFT machine up off the ground. Applying additional force may be required to engage the Stabilizer Brake at the point where it lifts the unit and locks in place. If too much force is needed, or the Stabilizer Brake does not lift the back wheels up, contact ServerLIFT Service and Support.*

2. Attempt to move the ServerLIFT machine. It should be locked in place and not be able to move. If it rolls at all, or Stabilizer Brake does not lock in DOWN position, contact ServerLIFT Service and Support.
3. To release, press green release pedal and allow pedals to return to UP positions. If operating correctly, proceed to next Function Test.

## **Lifting Test: Controls, Winch, Range of Movement**

1. Engage the Stabilizer Brake.
2. Turn unit power on by inserting key and turning clockwise to **ON ( - )** position.
3. **Review pendant operating instructions on page 15.** Press up on the pendant joystick to move the Platform UP and down on the joystick to move the platform DOWN. Test full range of motion up and down. Platform will automatically stop in fully extended and fully retracted positions. If Platform does not travel full range of motion consistently, contact ServerLIFT Service and Support.

➡ **Note: Clicking or ratcheting noises are normal when raising/lowering Platform.**

### **⚠ WARNING**

Platform Mast extends higher than Platform. When raising Platform, be aware of ceiling height, cable trays, sprinklers, lights, and other overhead obstructions.

4. Press up on the pendant joystick to move the Platform UP. As Platform Mast extends above the Vertical Mast, press TouchSTOP Sensor above Platform Mast while continuing to raise Platform. Platform should stop. Platform cannot be raised again until TouchSTOP switch lockout is cleared. Release TouchSTOP sensor. Use pendant control to briefly move platform DOWN. This clears the TouchSTOP lockout and allows platform to be raised. Verify pendant control moves platform upward.


➡ **Note: TouchSTOP® Sensor will stop Platform motion, even before Platform Mast extends above Vertical Mast.**

## **SmartTILT™ Platform/Easy-Glide™ Shelf Function Test**

1. Engage Stabilizer Brake.
2. Turn unit power on by inserting key and turning clockwise to **ON ( - )** position.
3. Raise Platform above casters to a comfortable working height.


4. Push down on handle and hold down to unlock and allow movement of Easy-Glide Shelf. Shelf will shift sideways up to 6" (15 cm) in each direction. There are multiple incremental adjustment locations.

**Pull down handle**

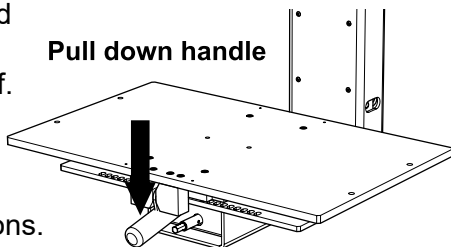


5. Test full movement of Easy-Glide Shelf in both directions. If shelf does not travel entire range of motion consistently or does not lock at incremental adjustment locations, contact ServerLIFT Service and Support.

**Slide out shelf**

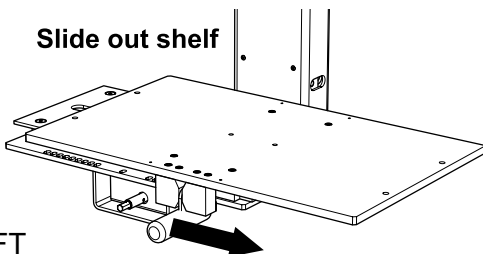

6. Return Shelf to neutral (center) position.

7. Test operation and range of motion of the SmartTILT Platform by using the included ratchet and 10 mm socket to slowly adjust the Platform angle UP and DOWN. Stop as soon as adjustment resistance is felt. Optionally use a level to measure the angle which should be approximately 0.5 degrees DOWN and 1.5 degrees (or more) UP.

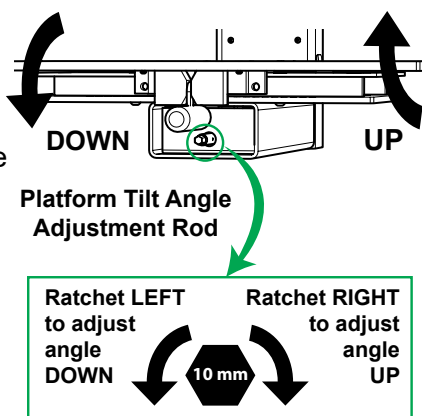

## **⚠ WARNING**

NEVER over-adjust the SmartTILT Platform angle. Adjust angle slowly and STOP as soon as resistance to the angle adjustment can be felt.


8. Lower Platform down. Turn off unit power by turning key to **OFF** ( **O** ) position. Release Stabilizer Brake.

## Before operating the ServerLIFT unit

1. Read and understand the operating steps and functions well.
2. Remove any objects or obstructions around or under the ServerLIFT unit, or in travel area of Platform.
3. Make sure Battery is charged.
4. Make sure Stabilizer Brake engages and locks in place. Both Stabilizer Brake Pads must be installed and engage floor correctly (see **Stabilizer Brake Operation** on pg. 12).
5. Review pendant operating instructions on page 15.

## Operating Steps


1. Position the ServerLIFT unit
- ⚠ 2. Engage Stabilizer Brake
- ⚠ 3. Power the ServerLIFT unit **ON** ( - )
4. Raise Platform to desired loading height
5. Load server or equipment onto Platform
- ⚠ 6. Secure server using Adjustable Tie Down Straps\*
7. Lower Platform to lowest position
8. Power the ServerLIFT unit **OFF** (O)
9. Release Stabilizer Brake
10. Move the ServerLIFT unit to destination
- ⚠ 11. Engage Stabilizer Brake
12. Power the ServerLIFT unit **ON** ( - )
- ⚠ 13. Raise platform to desired unloading height
14. Adjust Platform angle as desired for leveling the server using SmartTILT adjustment feature
- ⚠ 15. Load server from Platform and Easy-Glide™ Shelf into rack
16. Lower Platform to lowest position
- ⚠ 17. Power the ServerLIFT unit **OFF** (O)
18. Release Stabilizer Brake
19. Charge ServerLIFT unit when not in use

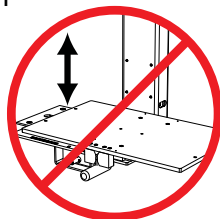

**⚠ DANGER**  
**NEVER raise or lower platform with shelf out of neutral (center) position.**

*\* especially critical when moving the ServerLIFT unit across uneven or not level ground*

## Stabilizer Brake Operation


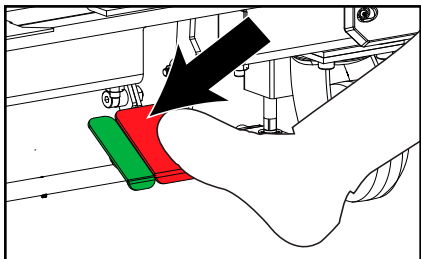


To engage Stabilizer Brake, depress red pedal until it locks in **DOWN** position. The back of the ServerLIFT unit should slightly lift up off the ground. The ServerLIFT unit should not move. If ServerLIFT unit moves, the Stabilizer Brake is not

functioning properly. Contact ServerLIFT Service and Support.

⚠ **Note:** Significant force may be required to engage Stabilizer Brake. The force required will increase with increased weight load on the platform.

Once Stabilizer Brake is locked in **DOWN** position, ServerLIFT unit is stabilized, parked and ready for use. Follow 11 (steps 3-8 or 12-16).

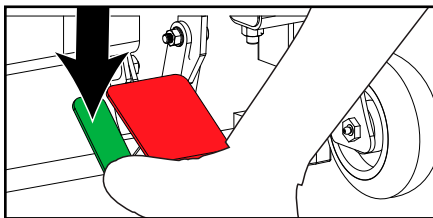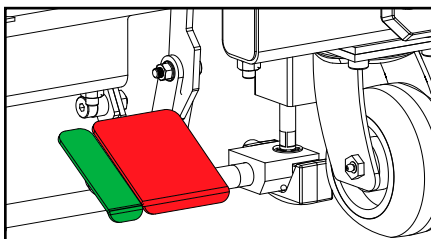

Press on green release pedal until unlocked and slowly pull foot back allowing both pedals to fully retract.



## ⚠ WARNING


- Always engage Stabilizer Brake before raising, lowering, or sliding Easy-Glide Shelf™
- Engage Stabilizer Brake whenever ServerLIFT unit is not in motion
- ServerLIFT unit will/should not move with Stabilizer Brake engaged

## Applying Load To The Platform

### ⚠ **WARNING**

NEVER place more than the maximum load on edge of Platform Shelf. The maximum rated load at the edge is reduced when the Platform Shelf is extended. NEVER raise or lower platform with shelf out of neutral (center) position.


<b>⚠ WARNING</b>  <b>SL-500X® MAX. LOAD</b>	 Max. Load at Center of the Platform	 Max. Load at Edge of Extended Platform
	<b>500 lbs</b> (227 kg)	<b>300 lbs</b> (136 kg)

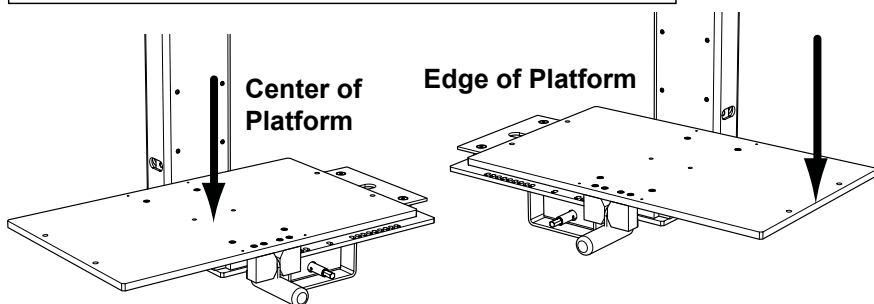

## Front Caster Swivel Lock Operation


### **UNLOCKED**

To unlock Front Caster, pull out ring and turn 90 degrees in either direction. Allow ring to align in horizontally (perpendicular) to groove as shown.

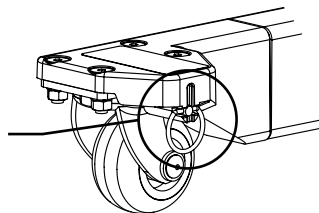

### **LOCKED**


To lock Front Caster, pull ring out and turn 90 degrees in either direction. Allow ring to align in vertical groove as shown. Ensure caster is in line with base frame arm and pointing backward. An audible click indicates the lock is engaged.

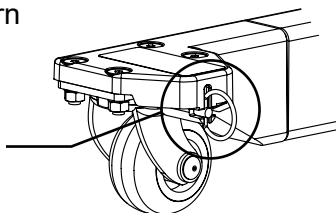

## Safety Directions

### Fall Hazards

- Do not stand on any part of lift.
- Do not climb on mast.
- Do not use as a personnel lifting platform or step.

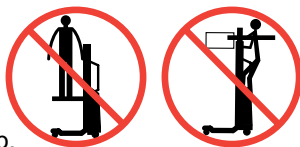

### Tip-over Hazards

- Do not lift load unless stabilizer is fully engaged.
- Do not move machine while platform is raised, except for minor positioning.
- Only raise load if properly centered on platform.
- Do not operate while under the influence of drugs or alcohol.
- Do not stand under overhanging load.
- Do not exceed rated load capacity.
- Do not stack loads.
- Do not support ladder against ServerLIFT unit.
- Do not use on uneven or graded surface



### Collision Hazards

- Only lower load in areas clear of personnel and obstructions.
- Platform Mast extends higher than Platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.



### Damaged Machine Hazard

- Do not operate a damaged or malfunctioning ServerLIFT machine.



### Improper Use Hazard

- Do not leave machine unattended with an elevated load.
- Do not raise or lower platform with shelf out of neutral (center) position OR with handle not retracted.



### Pinch Point Hazard

- Keep hands clear of moving parts and open sections during operation.
- Hands should only be on handle bars and/or on designated locations needed for operation.



## Fine Adjust Pendant

### Information About the Fine Adjust Pendant:

- The fine adjust pendant is beneficial for positioning equipment precisely. Its progressive control allows you to move the equipment efficiently by instantly pressing the joystick to the maximum speed position. As the equipment approaches the desired location, you can control the speed for precise positioning of the platform.
- A safety button at the end of the fine adjust pendant protects against accidental operation.
- The fine adjust pendant may be stored on hanger brackets on either side of the unit.
- An extendable coil cord and swing arm allow operation of the fine adjust pendant in any position to allow comfortable operation.

### Operating Instructions for the Fine Adjust Pendant:

#### 1. Remove Pendant from Hanger


- Take the pendant off its hanger.

#### 2. Activate the Pendant

- Hold down the safety button throughout the entire operation.


#### 3. Adjust the Platform Height

- Use the joystick to raise or lower the platform to the desired loading height.

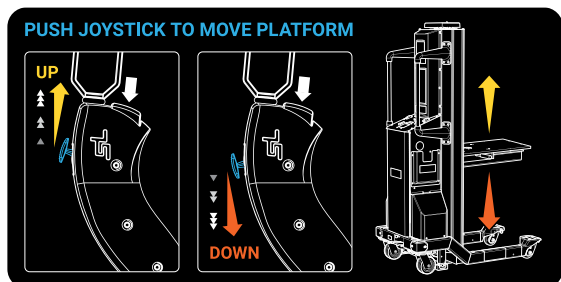

## 4. Control the Speed

- For faster travel:  
Move the joystick in the desired direction as shown in the pictures.
- For slower travel:  
Move the joystick slightly in the desired direction as shown in the pictures.

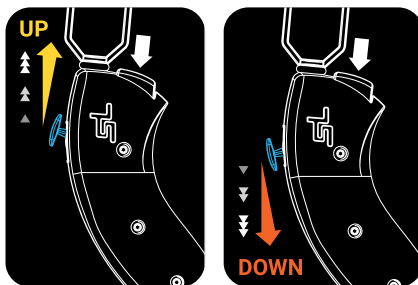

## 5. Approach the Desired Position

- As you get closer to the desired position, move the joystick towards the neutral position to slow the platform down.


## 6. Finalize the Position

- Once the platform is at the desired location, release pressure from the joystick.
- Slight settling of the load after releasing the joystick is normal and expected. This will be less of an issue while moving down, which does allow more precise alignment.

➡ **Note:** Refer to the provided pictures for precise joystick positioning.

## 7. Hang the Pendant

- Place the pendant back on its hanger while you load or unload the equipment.

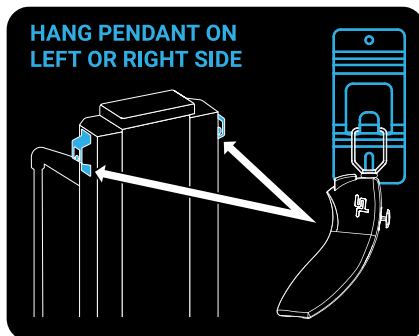

## PL-500X™ Platform Extension


The ServerLIFT PL-500X Platform Extension brings the reach of any ServerLIFT unit down to the floor, so it can safely and precisely handle equipment at bottom rack positions. The Platform Leveler can adjust the angle of the equipment up or down for precise server alignment. It is capable of lifting up to 500 lb (227 kg) when the included Counterweight Kit is installed.

### ⚠ WARNING

- Do not stand or ride on any part of Platform Extension.
- Do not exceed the maximum load.
- Do not operate with a load that has a center of mass placed forward (away from the ServerLIFT unit) of indicated Platform Extension Load Center.





**DO NOT USE THE PL-500X PLATFORM EXTENSION UNLESS THE REAR LATCH TABS ARE FULLY ENGAGED WITH THE PLATFORM AND THE SWING ARM HOOK IS ENGAGED OVER LIP OF PLATFORM MAST**

### Included with PL-500X Platform Extension

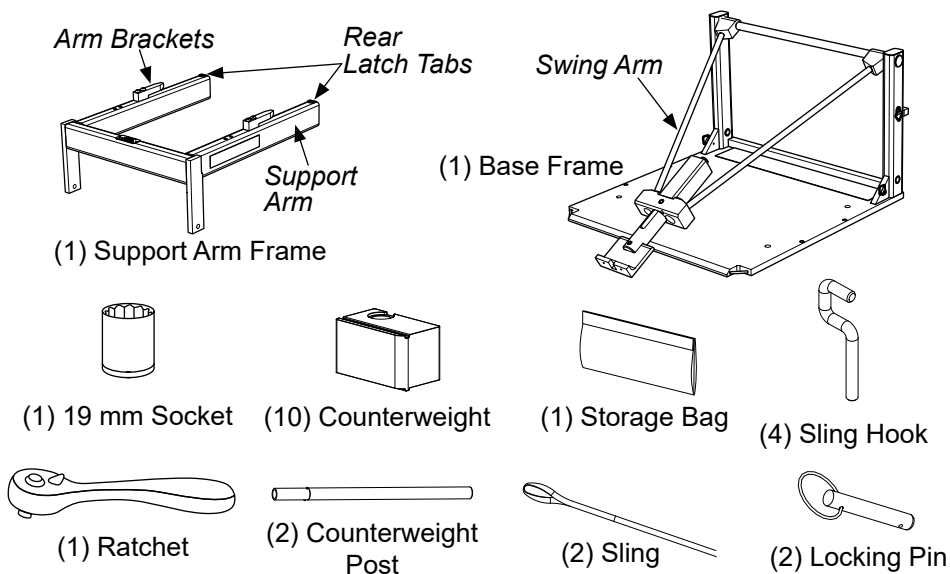

## Installing the Counterweight Kit

1. Remove plastic caps on rear of ServerLIFT unit as shown.
2. Insert Counterweight Posts (open end down) into holes and over the screws and nuts inside ServerLIFT Base support tube.
3. Place first Counterweight onto Counterweight Post as shown.
4. Place additional Counterweights onto the Post aligning the tongue and grooves of the Counterweights. Repeat until five Counterweights are installed in place.
5. Repeat steps 3 and 4 for the Post on other side of the ServerLIFT unit.

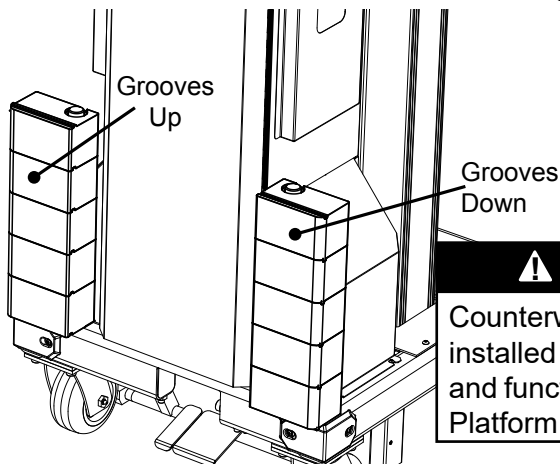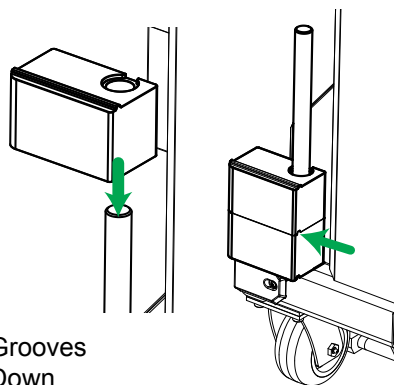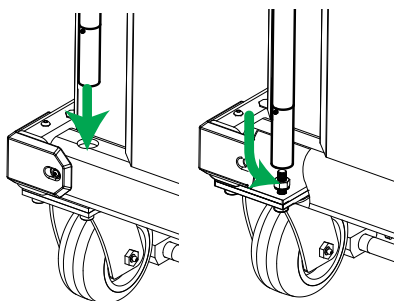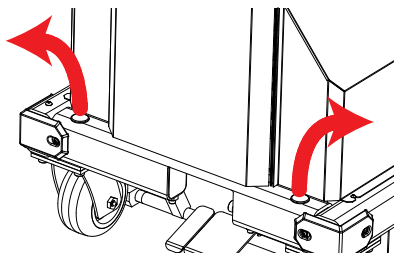


### **⚠ WARNING**

Counterweight Kit **MUST** be installed for full weight capacity and functionality of the PL-500X Platform Extension.



## **Setting up the PL-500X Platform Extension**

1. With the Swing Arm rotated toward the front, attach the Support Arm Frame to the Base Frame using the Locking Pins as shown.
2. Ensure that the Support Arm Frame can rotate forward. It should not be able to rotate backward.

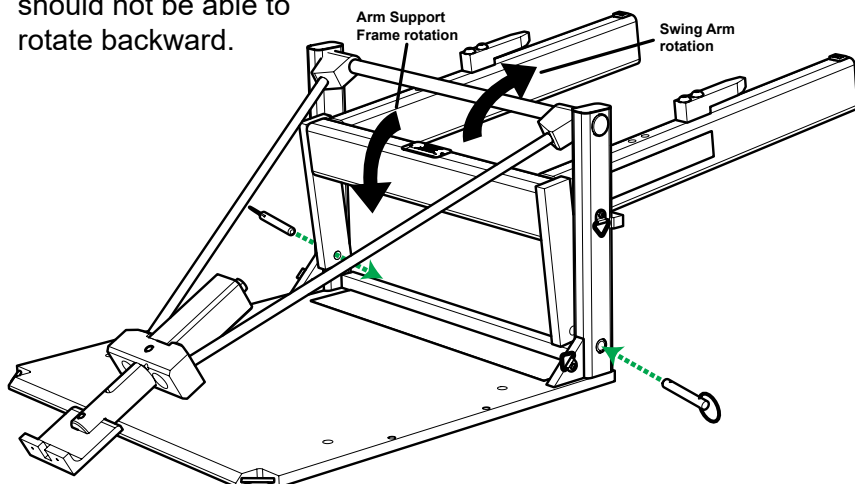



## **Attaching Platform Extension to the ServerLIFT unit**

1. See "Front Caster Swivel Lock Operation" on page 13 and prepare the ServerLIFT unit by locking the Front Casters in the backward position as shown.

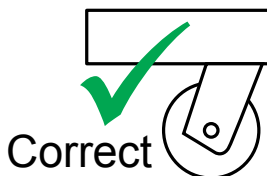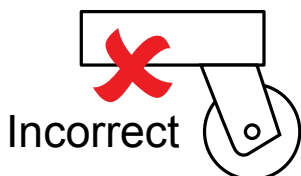

2. Engage ServerLIFT Stabilizer Brake and turn power ON.
3. With the PL-500X Platform Extension on the floor or on a pallet, position the ServerLIFT unit behind the PL-500X Platform Extension.


4. Raise the ServerLIFT Platform so the bottom plate of the Platform is in-line with the top of the PL-500X Support Arms.
5. Roll the ServerLIFT unit forward so the PL-500X horizontal arm brackets completely engage on top of the ServerLIFT Platform Bottom Plate as shown.

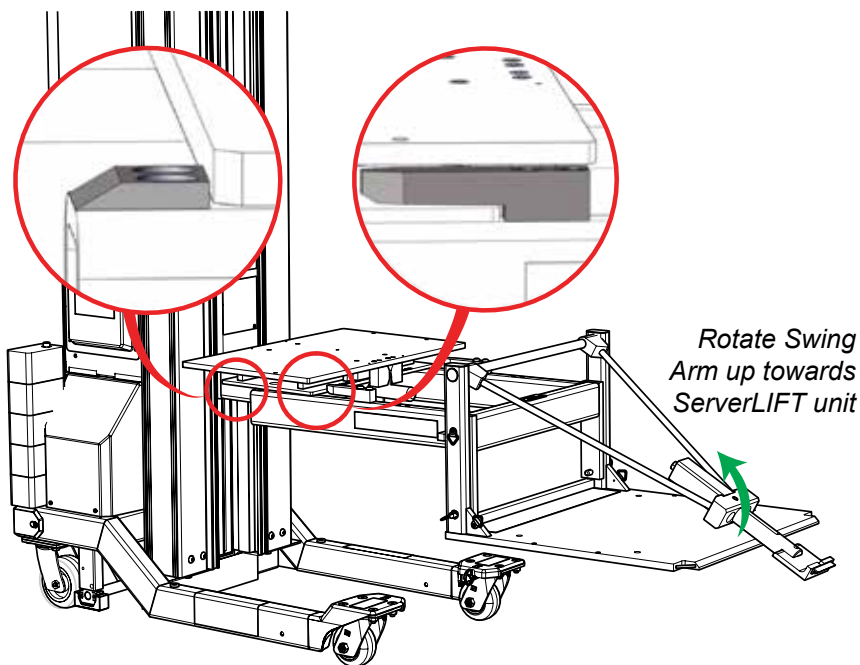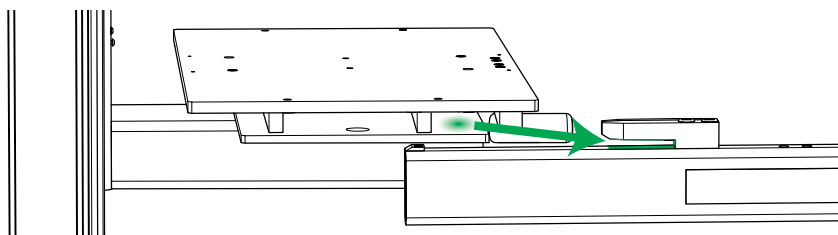

## **⚠ WARNING**

**Arm Brackets and Rear Catches MUST be fully engaged on Platform Frame Bottom Plate**

6. Rotate Swing Arm as shown and engage the Swing Arm Hook over the front edge of the ServerLIFT Platform Column. Adjust the length of the Swing Arm, and thereby the desired angle of the PL-500X Platform, by rotating the hex bolt at the end of the arm hook assembly using the ratchet provided.




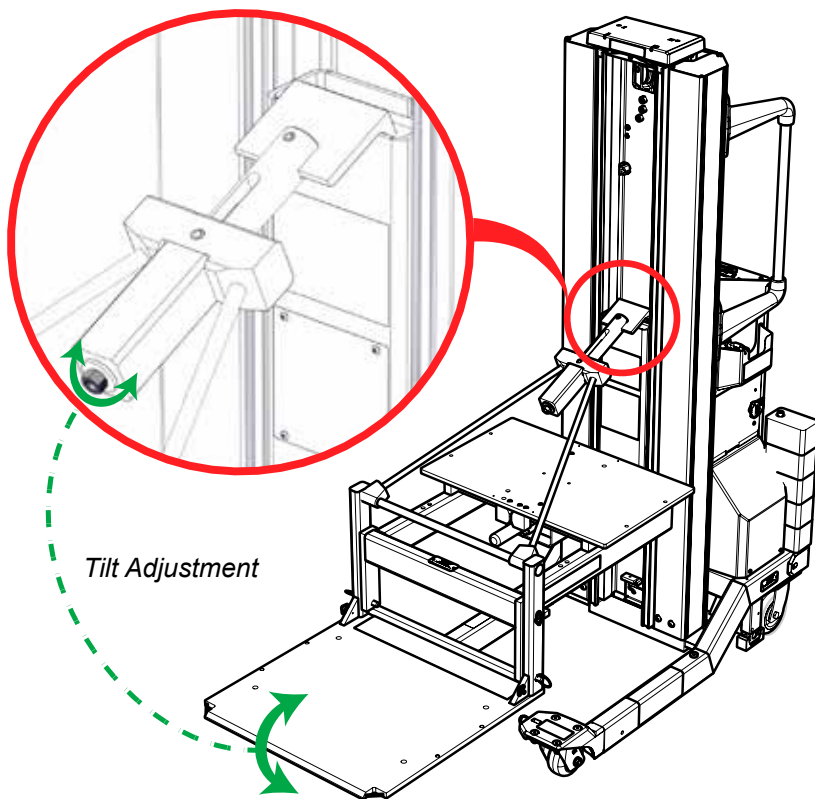


## **Removing Equipment from Boxes and off of Pallets**

⚠ **Note:** Proper setup, installation, and use of this product is the sole responsibility of the installer.

1. Ensure counterweights are installed at the rear of the ServerLIFT unit. See "Installing the Counterweight Kit" on page 18.


2. Insert all four Sling Hooks into the PL-500X Platform Extension as shown.
3. Hook loop end of one yellow Sling on to rear Sling Hook of one side.
4. Feed loose end of the sling from back to front under the server while server remains in box.

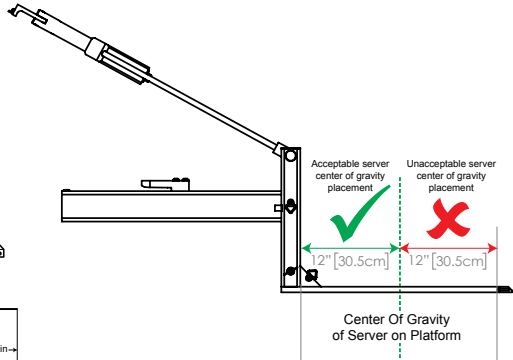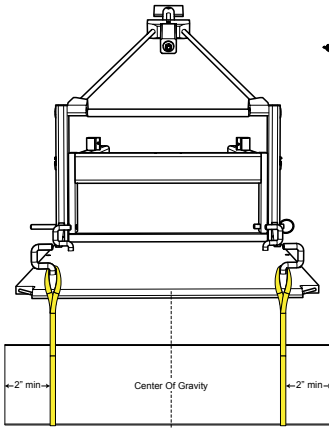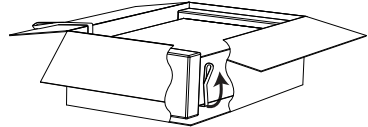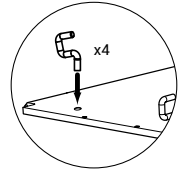

## ⚠ CAUTION

**Center of gravity of the load must be centered in between Sling Hooks AND may not be placed more than 12 inches (30.5 cm) forward of the back of the Platform Plate as shown.**




5. Hook loose loop end of the sling to the front sling hook on the same side.
6. Repeat with the second sling and sling hooks on the other side.

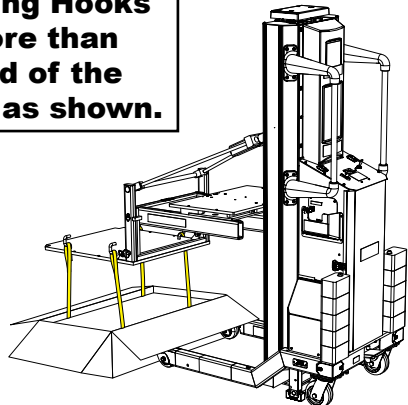

# Attachments

www.serverlift.com

7. Lift equipment out of box and remove packaging.
8. Set packaging aside or discard.
9. Lower equipment down onto a table or secure surface.
10. Remove yellow Slings from Sling Hooks.
11. Remove Slings from under equipment.
12. Remove Sling Hooks from Platform Extension.
13. Transfer server from table onto PL-500X Platform or remove Platform Extension from ServerLIFT unit to transfer server onto ServerLIFT Platform.
14. Follow "Operating Steps" on page 11.

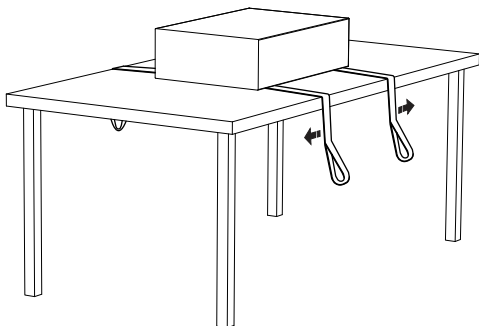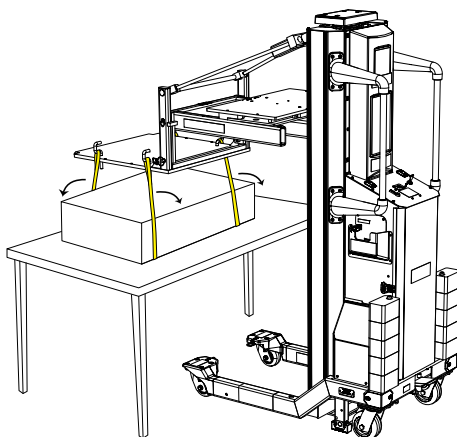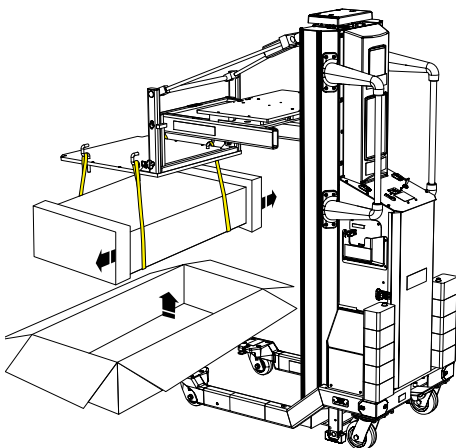

## LE-500X™ Lift Extension


The ServerLIFT LE-Series Lift Extensions are attachments that assist in lifting heavy IT equipment out of boxes and off of skids. They feature a lightweight design that are capable of lifting up to 500 lb (227 kg.) The LE-500X may be used with the ServerLIFT SL-500X or SL-350X devices.

### ⚠ WARNING

- Do not stand or ride on any part of Lift Extension.
- Do not exceed the maximum load.
- Do not operate with a load that has a center of mass placed forward (away from the ServerLIFT unit) of indicated Lift Extension Load Center.

**DO NOT USE THE LE-500X LIFT EXTENSION  
UNLESS THE REAR LATCH TABS ARE FULLY  
ENGAGED WITH THE PLATFORM**


### Included with LE-500X Lift Extension

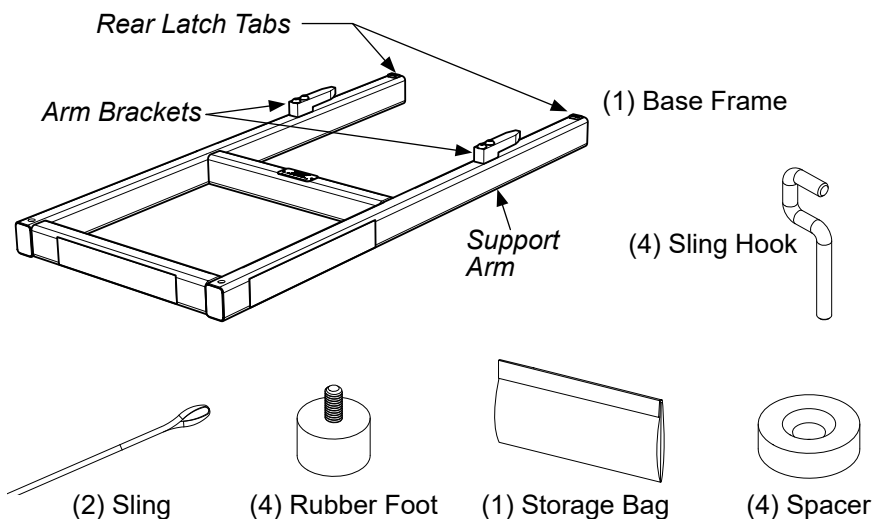

## **Setting Up the LE-500X Lift Extension**


ⓘ **Note:** *Proper setup, installation, and use of this product is the sole responsibility of the installer.*

1. Assemble Sling Hook into Spacer and insert completely through frame hole from the top as shown.
2. Screw Rubber Foot into bottom of Sling Hook. Repeat steps 1 and 2 in remaining three hook locations as shown.

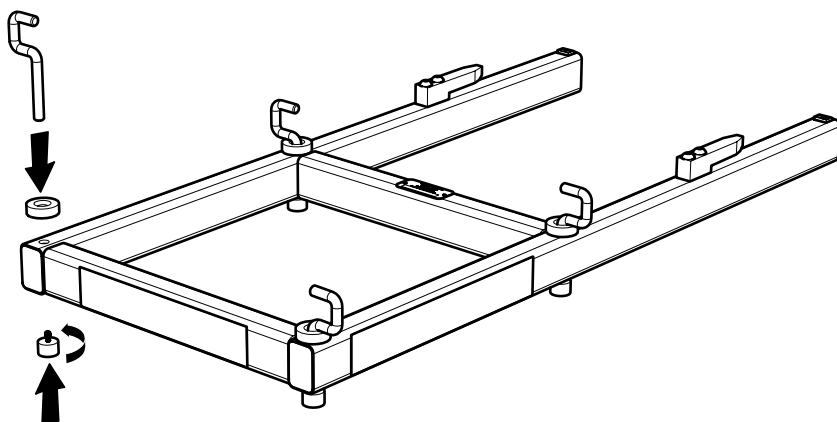


## **Attaching Lift Extension to the ServerLIFT unit**

1. Engage ServerLIFT Stabilizer Brake and turn power ON.
2. Raise Platform to a height of at least 1.5 ft (0.5 m) above Caster Wheel mounts.
3. Insert Lift Extension onto ServerLIFT Platform as shown. Lift Extension Catches should insert on top of Platform Bottom Plate with top of Lift Extension Frame Arms resting against underside of the Platform Bottom Plate.

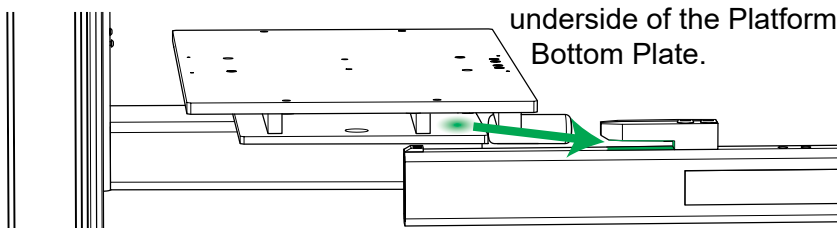



4. Ensure Rear Latch Tabs are fully engaged on the Platform as shown.

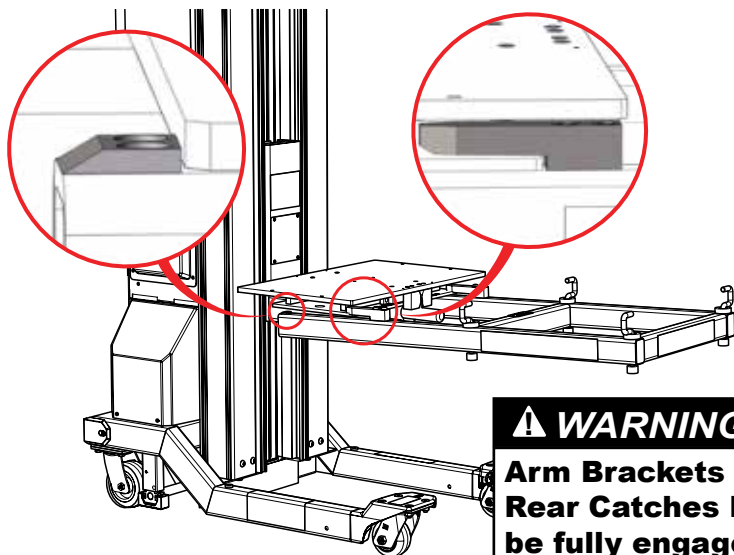

## ⚠ WARNING

**Arm Brackets and Rear Catches MUST be fully engaged on Platform Frame Bottom Plate**

### Using the LE-Series Lift Extensions

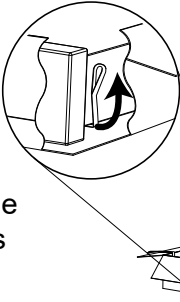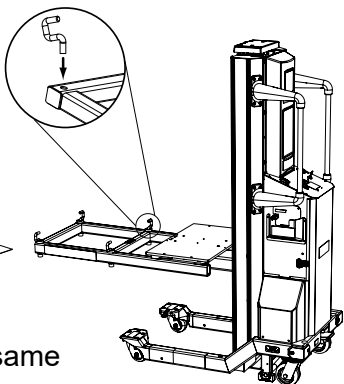
1. Hook loop end of one yellow Sling on to rear Sling Hooks of one side of the LE-500X Lift Extension.
2. Feed the loose end of the Sling from back to front under the server while server remains in box.
3. Hook loose loop end of the Sling to the front Sling Hook on the same side of the LE-500X Lift Extension.

# Attachments

www.serverlift.com



4. Repeat with the second Sling on the other side of the LE-500X Lift Extension.

5. Lift equipment out of box and remove packaging.

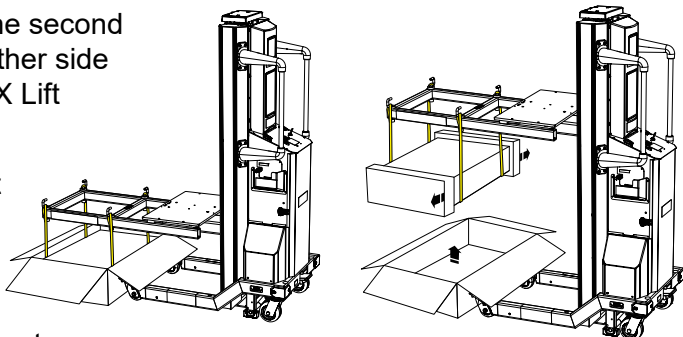

6. Lower equipment down onto a table or secure surface.

7. Remove yellow Slings from Sling Hooks. Remove slings from under equipment.

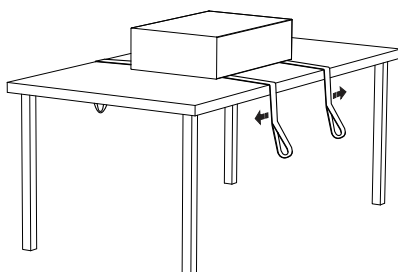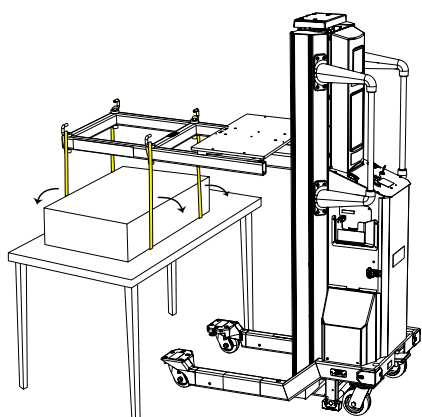


8. Remove Lift Extension from ServerLIFT unit, and safely set aside Lift Extension.

9. Slide equipment from table onto ServerLIFT Platform and Easy-Glide Shelf and follow "Operating Steps" on page 11.

## **⚠ CAUTION**

**Center of gravity of the load must be centered in between Sling Hooks.**

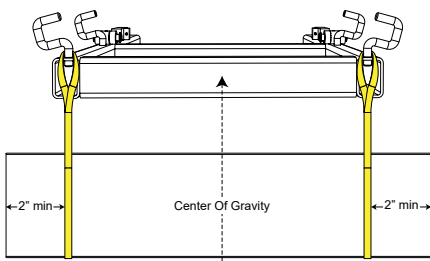


## RL-500™ Platform Riser

The ServerLIFT RL-500™ Platform Riser attachment enables users to install servers at the top of any rack in areas where equipment positioning is a challenge. These situations include:

- Low ceilings clearance or obstructions
- Cold and hot aisle containment rooms
- Ten foot (3 meter) tall racks
- Drop in rails


The ServerLIFT RL-500 Platform Riser features a lightweight yet rugged design, and is compatible with all current and past models of ServerLIFTs.

### Included with the RL-500 Platform Riser



(4) Thumbscrew

(1) Platform Riser

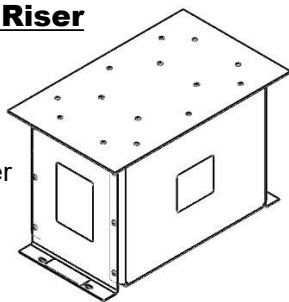

### **⚠ WARNING**

- Do not stand or ride on any part of Platform Riser.
- Do not exceed the maximum load of 500 lbs (227 kg).
- Do not use together with LE-500X or LE-1000X Lift Extensions or PL-500X Platform Extension.
- No corner load.

**SECURE PLATFORM RISER TO SERVERLIFT SHELF IN ALL FOUR LOCATIONS (WITH PROVIDED HARDWARE ONLY) PRIOR TO USE**

### **⚠ WARNING**


**YOU MAY BE ABOVE TOUCHSTOP SENSOR**

## **Attaching Platform Riser to the ServerLIFT Platform**

1. Engage ServerLIFT Stabilizer Brake.
2. Place Platform Riser onto ServerLIFT Easy-Glide Shelf. Line up slotted holes in bottom flanges of Platform Riser with threaded holes on ServerLIFT Easy-Glide Shelf.
3. Secure Platform Riser to Shelf with Thumbscrews in all four locations as shown.

### **⚠ WARNING**

**Platform Riser must be secured in all four locations**

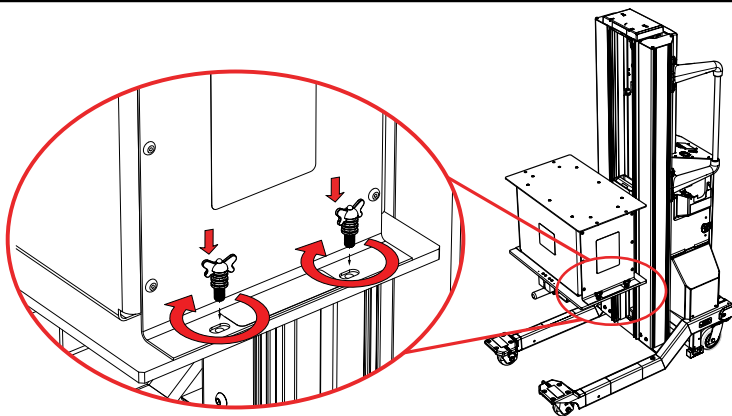

➤ **Note:** Platform Riser should be removed and set aside when not in use. Four holes on Platform Riser top plate are provided for convenient storage of Thumbscrews and Washers when not in use.

## **RS-500X™ Rail Lift**


The ServerLIFT RS-500X Rail Lift attachment enables users to position and support servers at an angle for installation or removal from slotted or drop-in rails.

The ServerLIFT RS-500X Rail Lift features a low profile yet rugged design, and is compatible with all current and past models of


ServerLIFTs. Its convenient, multi-hinged crank handle can be used to adjust the angle of the equipment surface from flat level up to 5° of angled position.

The ServerLIFT RS-500X Rail Lift can be secured to the ServerLIFT Platform Shelf in one of two positions, allowing the Operator the choice of using it from the left or right side of the ServerLIFT SL-500X device. The RS-500X Rail Lift can also be used in conjunction with the RL-500 Platform Riser.

## **Included with the RS-500X Rail Lift**

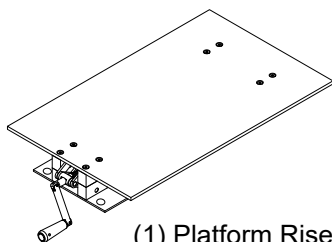

(1) Platform Riser

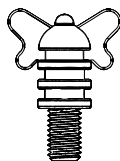

(4) Thumbscrew

### **⚠ WARNING**

- Do not stand or ride on any part of Rail Lift.
- Do not exceed the maximum load of 500 lbs (227 kg).
- Do not use together with LE-500X or LE-1000X Lift Extensions or the PL-500X Platform Extension
- No corner load.


**SECURE RAIL LIFT TO SERVERLIFT SHELF IN  
ALL FOUR LOCATIONS PRIOR TO USE  
(USING PROVIDED HARDWARE ONLY)**

## **Attaching to ServerLIFT Platform or RL-500X Riser**




1. Engage ServerLIFT Stabilizer Brake.
2. If installing onto the Platform Riser, ensure that the RL-500 Platform Riser is attached and secured to the ServerLIFT EasyGlide Shelf per the directions "Attaching Platform Riser to the ServerLIFT Platform" on page 29.

1. Place the RS-500X Rail Lift onto ServerLIFT Easy-Glide Shelf or RL-500 Platform Riser. Line up the four holes in the base plate of Rail Lift with threaded holes on ServerLIFT Easy-Glide Shelf or RL-500 Platform Riser.
2. Secure the RS-500X Rail Lift to Shelf with Thumbscrews in all four locations as shown below.

**⚠ WARNING**  
**Rail Lift MUST**  
**be secured in all**  
**four locations**

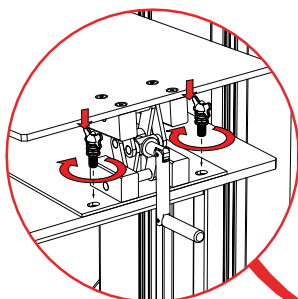

**Installed on  
Platform Shelf**

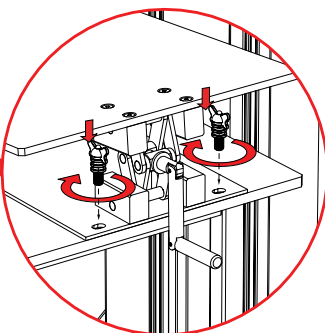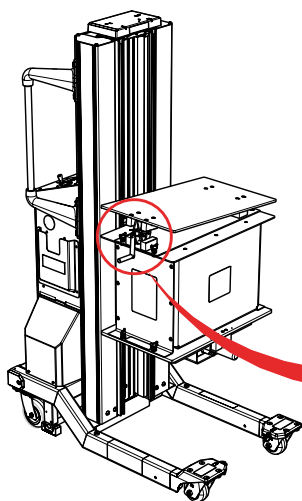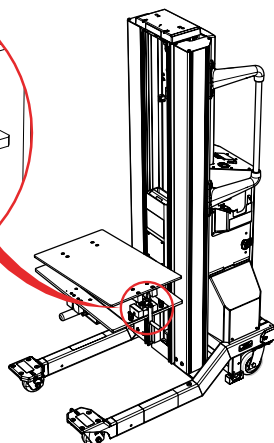


**Installed on  
RL-500 Riser**

## **Using the Rail Lift**


1. Ensure that the RS-500X Rail Lift is attached to the Easy-Glide Shelf or the RL-500 Platform Riser as needed per the above directions.

2. Follow "Operating Steps" on page 11.
3. For installs, raise platform to a height where the equipment nailheads are just above the installation rails.
4. Shift Easy-Glide Shelf towards the rack and rails. Extend the rails out to line up with nailheads.


5. Angle Equipment using Rail Lift by rotating the handle so the nailhead closest to the rack is positioned just above the slot.

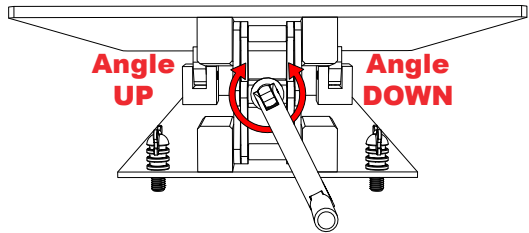

6. Lower Platform so the first nailhead lowers into its slot.
7. Guide the other nailhead(s) into their corresponding rail slot(s) using the RS-500X Rail Lift by rotating the handle to reduce the equipment angle.

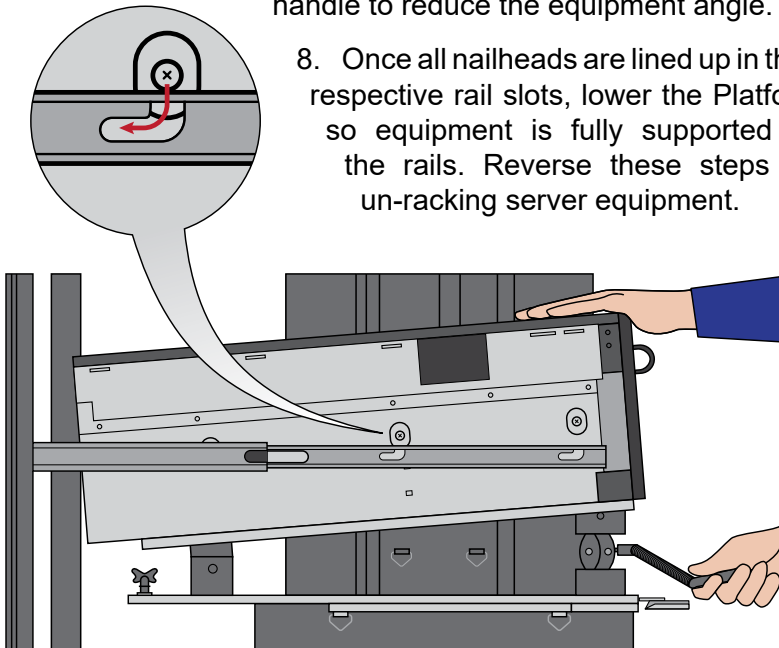

8. Once all nailheads are lined up in their respective rail slots, lower the Platform so equipment is fully supported by the rails. Reverse these steps for un-racking server equipment.

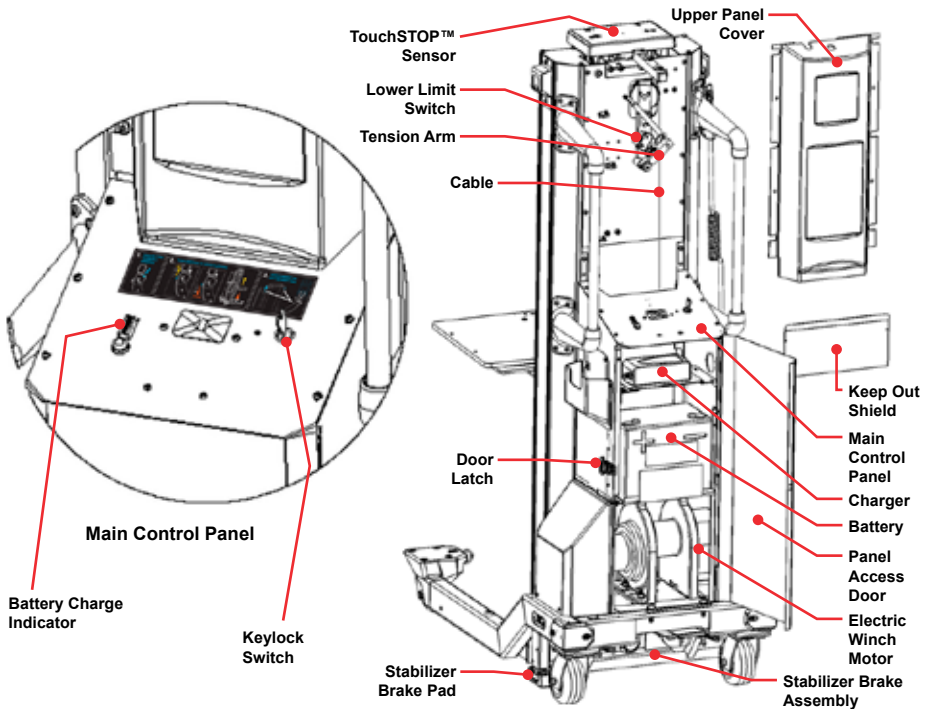

## Schedule of Maintenance

Activity	Required Frequency
Charge Battery	Daily (whenever the unit is not in use)
Replace Battery	As needed
Replace Stabilizer Brake Pads	As needed
Inspect Winch Cable	Every 12 months
Inspect Pulleys	Every 12 months
Flush and Change Winch Oil*	Every 12 months (suggested)*

\* Oil replacement kits and directions are available from ServerLIFT Service & Support.

**Note:** Units covered under optional Extended Service and Warranty contracts have all above maintenance checks (except for battery replacement) performed as part of ServerLIFT's annual service visit.

## Battery Charging



The SL-500X® data center lift is equipped with a rugged, compact battery charger that recharges the onboard 12V 80Ah VRLA battery.

The charger is automatic and simply needs to be plugged in to a suitable power supply or standard outlet, up to 240V.

The charger comes with a male, C14 receptacle, and a power cord with female C13 on one end and a 3-pin, Type B on the other end. However, any compatible female C13 power cord (with the local plug termination type you prefer) can be attached to it for plugging into your power supply or outlet.

The configuration and electrical requirements of are as follows:

	<b>SL-500X®/ SL-500Xi®</b>
<b>Indicated Voltage</b>	100-240V
<b>Max. Frequency Input</b>	50/60 Hz
<b>Max. Current Input</b>	3.5A
<b>Cord termination</b>	Any 6ft grounded AC
<b>Cord-end</b>	Male C14 inlet receptacle
<b>Plug Style</b>	Any (3-pin, Type-B provided)

<b>NOTICE</b>	 <b>DANGER</b>
KEEP CHARGING WHEN NOT IN USE TO MAXIMIZE BATTERY LIFE	 <b>UNPLUG BEFORE OPERATING OR SERVICING</b>


### **WARNING:**

- **NEVER** plug into an outlet with service outside model Voltage Input Range. Charger failure will result.
- **NEVER** operate a charger with a damaged cord or plug.
- When using an extension cord, a quality grounded cord of at least 16 AWG wire size (cords up to 50'/15 m) is required.

## Panel Access Door


### Opening

1. Flip Latch Tab up towards door.
2. Rotate counterclockwise until latch separates from Door Keeper Plate.
3. Flip entire latch assembly up away from door.
4. Open Panel Access Door.

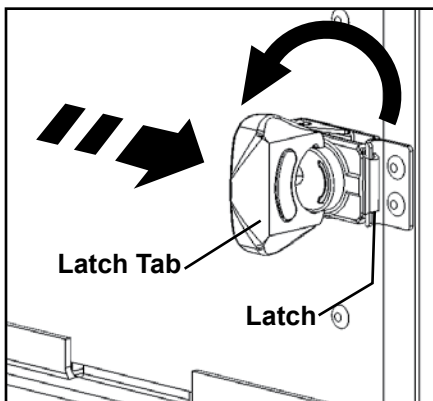

### Closing

1. Close Panel Access Door.
2. Flip entire latch assembly down towards door until it covers Door Keeper Plate.
3. Rotate Latch Tab clockwise until Latch engages Door Keeper Plate.
4. Flip Latch Tab down.

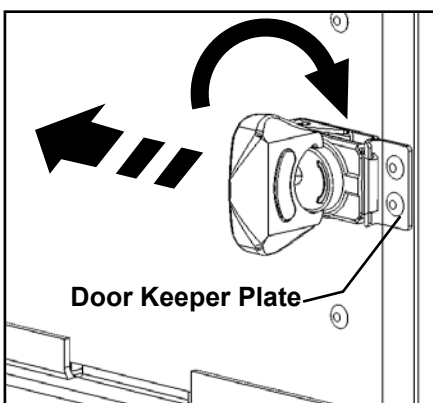

## Testing Battery Charge

### Automatic/Quick Test

1. Make sure Power Cord is unplugged.
2. Press Battery Charge Test Button on Main Control Panel, activating Battery Charge Level Indicator.
3. There are 3 charge zones on Level Indicator: DISCHARGED

(red), LOW (amber), and FULL (green). If charge level is FULL, the Battery is considered fully charged.

4. If Battery is not fully charged, charge for 12 – 48 hours depending on how low of a charge is indicated (very low charges require much longer charging times).
5. If Battery will not hold a charge, or if you suspect false results from Battery Charge Level Indicator and Battery may need to be replaced, a manual battery charge test is recommended.

## **Manual Test**

1. Make sure Power Cord is unplugged.
2. Open Panel Access Door.
3. Apply positive lead of a handheld voltmeter to positive (red) battery terminal and negative voltmeter lead to negative (black) battery terminal.
4. Read voltage. Fully charged batteries show 11.8 – 13V. Batteries reading 11V or less after 12 - 48 hours of charging should be replaced.
5. Close the Panel Access Door.

### **⚠ WARNING:**


- **ALWAYS** unplug Power Cord before testing Battery charge.
- Testing Battery charge with Power Cord plugged in will yield false results.

## **Battery Replacement**


The ServerLIFT SL-500X data center lift uses an onboard low-maintenance, VRLA (valve-regulated lead-acid), AGM (Absorbed glass mat) battery. It is sealed and spill-proof. Replacements are commonly available directly through ServerLIFT Service & Support.

Construction	Nominal Voltage	Nominal Capacity	Terminal Type
ABS Plates AGM Separator	12 Volt	75 or 80 Ah	Internal
Length	Width	Height	Weight
10.20" 260 mm	6.61" 168 mm	8.43" 215 mm	52.53 lb 23.83 kg

⚠ **Note:** *ONLY batteries with INTERNAL terminals will fit inside the ServerLIFT SL-500X data center lift. Batteries with external terminals will not work and may cause fire or explosion.*

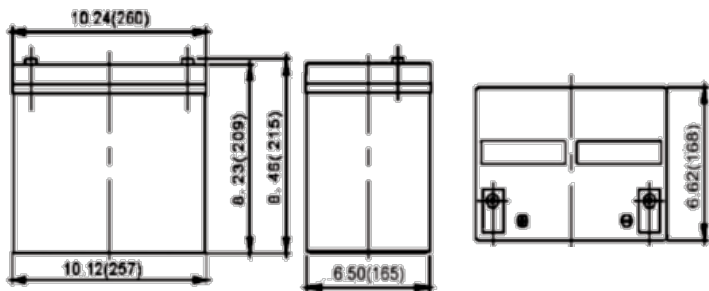

1. Open Panel Access Door.
2. A zip-tie installed to hold the Battery in place during shipping may be holding it in place. Cut or remove zip-tie. Zip-tie does not need to be replaced.
3. Pull red Battery Quick Disconnect out from its mate.
4. Remove Battery and Quick Disconnect wire assembly from shelf.

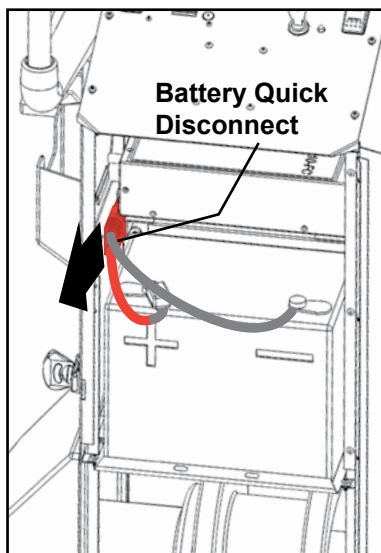


⚠ **Note:** *Remove with care – Batteries weight 52 lb (23.5 kg)*


5. Loosen and remove terminal post from positive (red) battery terminal. Keep the post and all washers.
6. Repeat step 5 for negative (black) battery terminal.
7. Connect red end of Battery Quick Disconnect assembly to positive (red) terminal of new battery with post and washers. Ensure post is screwed on tightly.
8. Connect other end of Battery Quick Disconnect assembly to negative (black) terminal of new battery with post and washers. Ensure post is screwed on tightly.
9. Carefully put new Battery into place on shelf.
10. Insert red Battery Quick Disconnect receptacle to its mate, located on inside of panel enclosure.
11. Close Panel Access Door.
12. Verify ServerLIFT is receiving power from new Battery by turning it **ON** and cycling Platform up and down. Check that Battery Charge Level Indicator shows FULL when tested.

## Stabilizer Brake Boot Replacement

1. Pull top corners of old boot out and down to remove from Stabilizer Brake Pad.
2. Press new boot on until it snaps in to place.

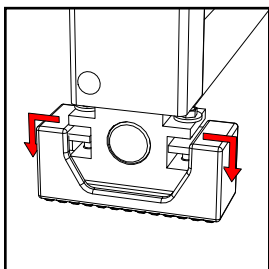

Removal

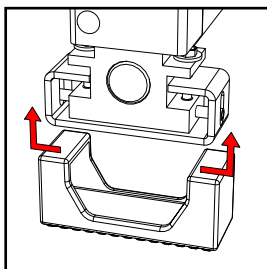


Installation

## Pulley and Cable Inspection

### Cable Inspection

1. Fully lower platform and inspect upper cable section.
2. Open Panel Access Door. Fully cycle Platform up and down while inspecting section of cable winding onto the winch motor.
3. When inspecting cable, look for:
  - **Wear or Corrosion**
  - **Broken wires or cut strands**
  - **Distortion, kinking, uneven strands, crushed parts, uneven cable diameter, or strands coming off**

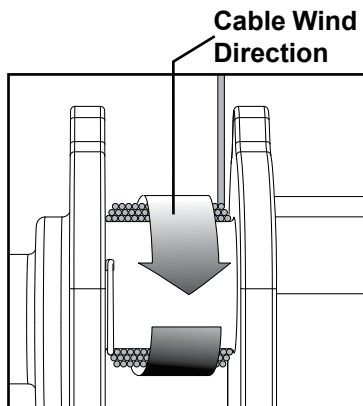

Discontinue use of ServerLIFT device if any cable damage is discovered upon inspection, and contact ServerLIFT Service & Support immediately. Do not attempt to repair or change cable.

### Pulley Inspection

When inspecting pulleys, listen for squeaking, look for cracks, extreme wear, loose connections, and bent/damaged pulley guards.

➡ **Note: Bent or damaged pulley guards WILL interfere with cable operation. DO NOT attempt to operate with damaged pulleys.**

1. Remove Upper Panel Cover. Inspect Tension Switch Pulley.
2. From front of the machine, inspect Upper Pulley.
3. Inspect Lower Pulley from undercarriage of the ServerLIFT unit.

➡ **Note: Lower Pulley only be visible from undercarriage when Platform is completely lowered.**

If inspection reveals any pulley irregularities or damage, discontinue use of ServerLIFT device and contact ServerLIFT Service & Support immediately.

## **Features**

### **Compact Design**

- Slim 24" (61 cm) base easily navigates narrow aisles
- 4 oversized swivel casters for tight maneuvering and protection of raised floor tiles
- Swivel locks in front engage when straight tracking is required
- Fits through standard doorways
- Ideal for cold aisle containment rooms
- Overall heavy duty steel and aluminum construction
- Reusable packaging included for location transfers

### **Fully Contained**

- Non-hydraulic heavy duty winch motor
- Powered by a rechargeable deep-cycle, AGM leak-proof/sealed (AGM), 12V VRLA battery
- Safe for data center floors

### **Heavy Duty Platform**

- Minimal to no deflection or sagging even under full load
- Precise equipment alignment
- Included tie-down straps secure equipment during moves

### **Side-Loading Usability**

- Load equipment while parallel to the rack
- Eliminates any obstruction of operator's view
- Easy alignment facing the rack

### **Easy-Glide Shelf**

- 6" (15.25 cm) left or right lateral movement for supported loading
- Fits into standard 19" (48.25 cm) racks
- Micro-leveling SmartTILT™ shelf adjustment for precise alignment
- Seamless install from the platform into the rails

### **Smart Controls**

- Precise height adjustment with proprietary microprocessor-controlled lifting system
- The pendant allows a single operator to align equipment while facing the rack.

# Specifications

www.serverlift.com


## **Telescoping Mast**

- SL-500X Lift 500 lb (227 kg) to 8' or 2.45 m
- Quickly raise equipment to the top of travel in under 1 minute

## **TouchSTOP™ Sensor**

- Proprietary sensing technology cuts power to machine on contact with ceiling, lights, cable trays, or other overhead obstructions
- Safety feature prevents equipment damage and injuries
- Enables safe use in contained and open environments without any modifications or adjustments

**TouchSTOP™  
Sensor**

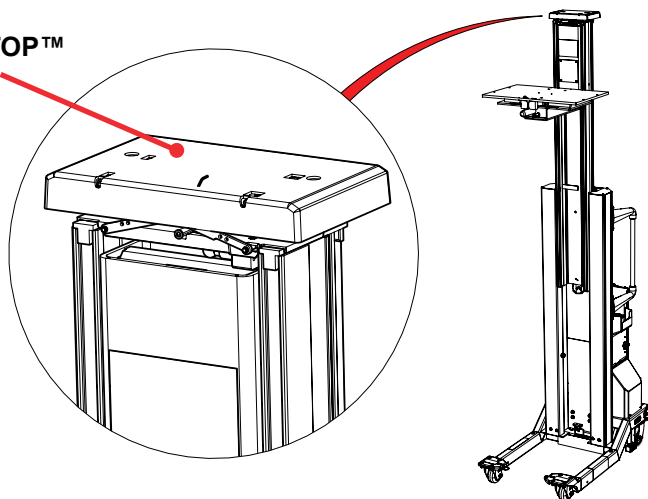



## **Locking Stabilizing Brake System**

- Prevents unit from moving during installation
- Increases side-to-side stability


## **Safe Operation**

- Eliminates manual lifting of equipment
- CE certified and FCC/IC classified
- Built-in solid state battery charger
- Cord management sleeve
- Secure key lock switch allows power lock-out of device when not in use or during loading to prevent accidents.
- Automatic safety stops in maximum upper and lower positions

## Dimensions and Capacity, SL-500X

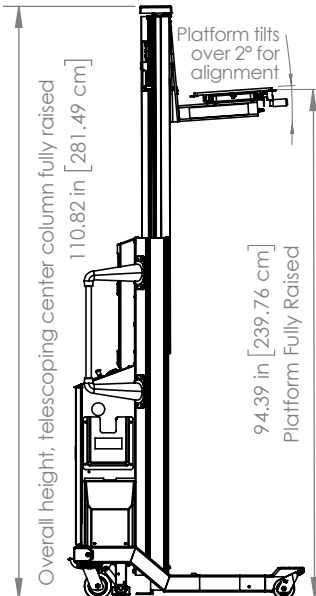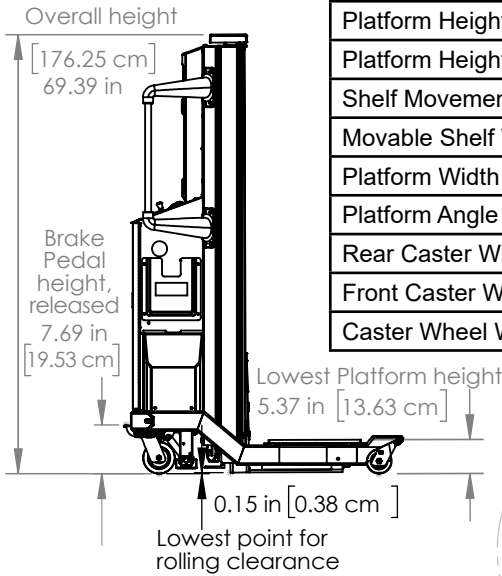

Working Dimensions	US	Metric
Platform Height, Extended	7.86'	2.40 m
Platform Height, Lowered	5.37"	13.6 cm
Shelf Movement per side	6.0"	15.2 cm
Movable Shelf Width	14.6"	36.8 cm
Platform Width	24"	61.0 cm
Platform Angle Adjustment	2°	2°
Rear Caster Wheel Diameter	5"	12.7 cm
Front Caster Wheel Diameter	4"	10.2 cm
Caster Wheel Width	2"	5.08 cm

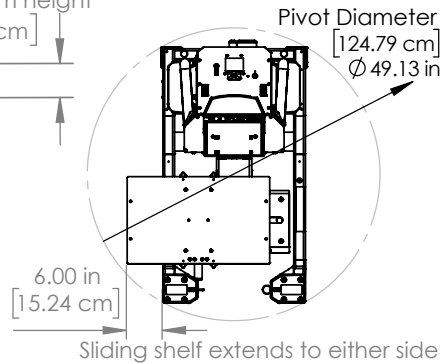

Product Dimensions	US	Metric
Unit Height (Lowered)	5' 9.4"	1.76 m
Unit Height (Raised)	9' 2.8"	2.81 m
Length	3' 8"	1.12 m
Width	2' 0.5"	0.62 m

Capacity and Weight	US	Metric
Capacity at Platform Center	500 lb	227 kg
Capacity at Platform Edge	300 lb	136 kg
Total Unit Weight	428 lb	194 kg
Rated Cable Failure Load	4000 lb	1814 kg

## ServerLIFT Unit Does Not Move/Roll

Possible Cause	Solution
Brake is engaged.	Disengage Stabilizer Brake.
Obstruction with caster wheel.	Remove obstruction.
Caster wheel(s) damaged.	Replace damaged hardware.

## Stabilizer Brake Does Not Work

Possible Cause	Solution
Stabilizer Brake Boot(s) missing.	Replace Stabilizer Brake Boot(s)
Operating on uneven floor.	Make sure unit is on even floor. Do not operate unit on uneven floor
Stabilizer Brake latch not engaging/locking.	Check undercarriage of unit to see if Stabilizer Brake latch is engaging. If it does not contact ServerLIFT Service & Support.

## ServerLIFT Does Not Swivel/Turn

Possible Cause	Solution
Front Swivel Lock(s) engaged.	Disengage Swivel Lock(s).
Obstruction with caster wheel.	Remove obstruction.
One or more caster wheels damaged.	Replace damaged hardware.

## Front Caster Wheels Do Not Lock

Possible Cause	Solution
Locking pin not engaging with caster groove.	Make sure there are no obstructions between pin and groove. Adjust caster wheel until engagement occurs. Detailed directions for this adjustment available from ServerLIFT Service & Support.
Caster groove or locking pin worn or damaged.	Replace worn or damaged hardware.

## Easy-Glide Shelf Does Not Side Shift

Possible Cause	Solution
Handle is not unlocked from its position.	Press handle down. Attempt to shift Shelf sideways.
Path of shelf is obstructed.	Locate and remove obstruction(s).
Rolling mechanism or locking mechanism is damaged.	Check under Platform for damaged part(s). Contact ServerLIFT Support for replacement parts.

## Shelf Handle Won't Lock in Place

Possible Cause	Solution
Locking mechanism is damaged.	Check under Platform for damaged part(s). Contact ServerLIFT Support for replacement part.

## Can't Adjust SmartTILT Platform Angle

Possible Cause	Solution
Platform reached it's maximum tilt angle in one direction.	Adjust platform angle in the other direction.
SmartTILT mechanism over-torqued in one direction.	Adjust platform angle in the other direction. If unable to adjust, contact ServerLIFT Service & Support.
Platform is in the lowest position.	Platform cannot be adjusted DOWN when it is in it's lowest position. Raise the Platform UP and re-attempt to adjust the Platform tilt angle.
Tilt mechanism is damaged.	Contact ServerLIFT Service and Support.

## Keylock Spins 360 Degrees

Possible Cause	Solution
Keylock D-groove damage or missing.	Replace Main Control Panel plate.
Keylock nut loose.	Tighten nut on underside of Main Control Panel and make sure Keylock wiring is secure.

## Power On Indicated; No Functionality

Possible Cause	Solution
Low Battery charge.	Test and charge Battery. If Battery does not charge, follow troubleshooting above.
Wiring not connected to Main Circuit Board.	Open Panel Access Door. Check that all connections to Main Circuit Board are secure.
Main Circuit Board damaged.	Contact ServerLIFT Service & Support for replacement part. Replace Circuit Board.
Upper and/or Lower Limit Switches are activated.	Follow <i>Raises But Does Not Lower</i> and <i>Lowers But Does Not Raise</i> troubleshooting.
Pendant is damaged or non-functional	See page 47.

## No Power Indicated; No Functionality

Possible Cause	Solution
Low Battery charge.	Test and charge Battery. If Battery does not charge, follow troubleshooting above.
Keylock Switch not turned to the ON position.	Turn Keylock Switch to ON position.
Battery is not connected.	Open Panel Access Door. Connect Battery Quick Disconnect to mating receptacle.
Wiring not connected to Main Circuit Board.	Open Panel Access Door. Check that all connections to Main Circuit Board are secure.
Main Circuit Board damaged.	Contact ServerLIFT Service & Support for replacement part. Replace Circuit Board.

## Battery Does Not Charge

Possible Cause	Solution
Power not being supplied to the charger.	Check that Power Cord is plugged in to a live outlet within appropriate Voltage Input Range. If using an extension cord, check that it is working.
Battery Quick Disconnect loose or not connected.	Connect Battery Quick Disconnect.
Failed Battery.	Test Battery. Replace Battery if necessary.
Failed Charger.	If plugged in to a power source outside appropriate Voltage Input Range, Charger will fail. Check top of Charger from inside access panel. If plugged in and no lights are on, replace Charger.

## Platform Raises But Does Not Lower

Possible Cause	Solution
Platform is obstructed.	Remove obstruction from below Platform.
Lower Limit Switch is stuck in the engaged/depressed position.	If Platform is not in its lowest position and there are no obstructions below it, remove Upper Panel Cover. Make sure all electrical connections to Lower Limit Switch are secure. Make sure Lower Limit Switch plunger is not stuck in depressed position. Make sure Tension Swing Arm <b>is not</b> engaging/depressing the switch plunger.
Damaged Circuit Board.	Contact ServerLIFT Service and Support for replacement part. Replace Circuit Board.

## Platform Lowers But Does Not Raise

Possible Cause	Solution
TouchSTOP Sensor binding and stuck in engaged position.	Make sure no obstructions are binding TouchSTOP Sensor mechanism and mechanism is tightly secured. Manually unbind mechanism and ensure it travels down and springs back freely. If platform still does not raise, contact ServerLIFT Service and Support for instructions on troubleshooting TouchSTOP sensor.
Internal Upper Limit Switch is stuck in the engaged/ depressed position.	Contact ServerLIFT Service and Support for instructions on troubleshooting internal limit switches.
Damaged Circuit Board.	Replace Circuit Board.

## Fine Adjust Pendant Not Working

Possible Cause	Solution
No power to unit.	Follow <i>No Power Indicated</i> troubleshooting above.
Pendant cable (far end) loose or not connected.	Remove the upper panel cover using a T30 Torx bit. Disengage latching on white connector bodies and separate connectors. Check pins in both connectors to ensure no pins are bent, missing, or pushed out of place. If damage to pins is observed, contact ServerLIFT Service and Support. If no damage to pins is found, press the two white connectors together to ensure a secure connection.
Pendant cable (pendant end) loose or not connected.	If the strain relief is not securely attached to the pendant plastic and wires are exposed, please contact ServerLIFT Service & Support.
The analog joystick does not return to the neutral position when released.	Contact ServerLIFT Service & Support.
The safety button does not return to its original position when released.	Contact ServerLIFT Service & Support.

## SERVERLIFT DATA CENTER LIFT LIMITED WARRANTY

### LIMITED WARRANTY COVERAGE

The limited warranty covers defects in materials and workmanship of the ServerLIFT SL-500X® data center lift (collectively “Equipment”). The warranty is not transferable and must be registered at <https://serverlift.com/register>. The warranty applies only to the original end-user owner of the Equipment unless prior written notice is received by and approval given by ServerLIFT.

For the Warranty Periods listed below, ServerLIFT LLC (henceforth “ServerLIFT”) warrants that the Equipment:

1. Will be free from defects in materials and workmanship.
2. Will perform substantially in accordance with ServerLIFT’s published specifications.

ServerLIFT will ship any parts that are in-warranty at no charge in accordance with the Limited Warranty Return & Repair Policy listed below. ServerLIFT will provide repair or replacement instructions as needed.

### LIMITED WARRANTY PERIODS

The Warranty Period is one year from the day of delivery except for the following components:

<u>Component/Equipment</u>	<u>Warranty Period</u>
Structural	10 years
Battery	1 year <sup>1</sup>

<sup>1</sup> Cost of replacement battery only. Does not include labor, shipping, or disposal of old battery.

### LIMITED WARRANTY EXCLUSIONS

The warranty is void if:

- The applicable Warranty Period has expired;
- The Equipment has missing or altered serial numbers; or
- The Equipment has been repaired or modified by an agent not authorized by ServerLIFT.

The warranty specifically excludes damage to the Equipment, including but not limited to:

- Damage incurred during shipment (other than shipping with a ServerLIFT contracted carrier);
- Damage caused by impact with other objects, drops or falls, including external case cracks, dented or punctured case, broken latches, torn covers, broken doors, or physical breakaway of internal components;
- Damage caused by intrusion of foreign matter into the Equipment;
- Damage to internal components caused by power surge;
- Damage to electrical connectors including corrosion, broken and/or bent pins;
- Damage to Equipment caused by environmental corrosion;
- Damage caused by improper maintenance;
- Damage caused by use of appurtenances not supplied by ServerLIFT or failures which result from alterations, modifications or foreign objects;
- Damage caused by the use of the Equipment for purposes other than for which it was designed
- Damage caused by other abuse, misuse, neglect, accident, negligence, mishandling or misapplication; and
- Damage attributable to acts of G-d.

## LIMITED WARRANTY RETURN & REPAIR POLICY

For warranty assistance call ServerLIFT LLC at 1-602-254-1557 between 9:00 a.m. and 5:00 p.m. Mountain Standard Time, Monday through Friday (excluding observed holidays), email [support@serverlift.com](mailto:support@serverlift.com) or visit <http://serverlift.com/support/>.

As part of the terms of this warranty, you may be required, as needed, to assist ServerLIFT's remote support staff with gathering information needed to make a warranty claim and/or repair. This includes, but is not limited to troubleshooting, testing, and providing pictures and/or video of the issue(s). Failure or refusal to provide ServerLIFT with the requested information may result in the invalidation of the claim as covered by this warranty.

Equipment that fails to comply with this warranty shall, at ServerLIFT's sole discretion, be repaired or exchanged for an equivalent replacement. You are responsible for returning the non-conforming Equipment, properly packaged, to ServerLIFT during the Warranty Period. ServerLIFT will pay return shipping costs of Equipment serviced under the Limited Warranty.

To obtain warranty service or to return Equipment, written notification must be made to ServerLIFT in advance via email ([support@serverlift.com](mailto:support@serverlift.com)) or fax (1-602-412-4479) that must include the following information:

- Equipment serial number;
- Date of original Equipment receipt;
- Original ServerLIFT invoice and/or invoice number (proof of purchase);
- Contact information of the end-user and location of Equipment; and
- Description of the problem and/or desired service action.

In the event of a return or repair that is determined to occur at ServerLIFT's facilities, you will be issued a Warranty Repair Authorization (WRA) or case number and shipping instructions. Otherwise, ServerLIFT will arrange onsite service based on a mutually convenient schedule.

Equipment returned with a void warranty and/or without prior notification to and approval from ServerLIFT may be repaired and/or shipped back to the end-user at their expense.

If it is determined that the problem is not covered under warranty, you will be contacted with service alternatives available on a time and materials basis. You will also be responsible for all applicable shipping costs.

## WARRANTY LIMITATIONS

IN NO EVENT SHALL SERVERLIFT BE LIABLE, WHETHER IN CONTRACT, NEGLIGENCE, TORT, OR ON ANY OTHER BASIS, FOR COVER OR FOR INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE SALE, SERVICES, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION IN THE OPERATION OF EQUIPMENT, SERVICES, HARDWARE OR SOFTWARE, EVEN IF SERVERLIFT IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES SO THIS LIMITATION MAY NOT APPLY TO YOU.

This warranty and performance hereunder shall be governed by and construed in accordance with the laws of the State of Arizona without reference to its choice of law principles.

## WARRANTY EXTENSIONS AND SERVICE CONTRACTS

Extended warranty periods and service contracts are available to suit your specific needs. To learn more about these optional service programs contact ServerLIFT Service & Support via e-mail ([support@serverlift.com](mailto:support@serverlift.com)) anytime or by phone (1-602-254-1557) 9:00 AM to 5:00 PM Mountain Standard time, Monday through Friday (excluding observed holidays).



## **Declaration of Conformity**

**Manufacturer:** ServerLIFT LLC  
17453 N 25th Ave  
Phoenix, AZ 85023 USA  
602-254-1557  
www.serverlift.com

**Model numbers:** SL-500X®, SL-500XI™, SL-500FX™, SL-500FXI™

**Max. Load Capacity:** 227 kg (500 lbs)

**Type of equipment:** Server and IT equipment lifting machine

We declare that the product identified above meets the requirements of the following EU directives and standards for the purpose of CE compliance:

### **Directives/Standards:**

#### **Immunity Standards**

##### **IEC/EN 61000-6-1: 2016**

Generic Standards - Immunity for Industrial Environments

##### **IEC/EN 61000-4-2:**

Electrostatic Discharge (ESC)

##### **IEC/EN 61000-4-3:**

Radiated, radio frequency, Electromagnetic Field Immunity Test

##### **IEC/EN 61000-4-4:**

Electrical Fast Transient/Burst Immunity Test (EFT)

##### **IEC/EN 61000-4-5**

Surge Immunity Test (Mains)

##### **IEC/EN 61000-4-6**

Immunity to Conducted Disturbances, Induced by Radio Frequency Fields

##### **IEC/EN 61000-4-8**

Power Frequency Magnetic Field Immunity Test

##### **IEC/EN 61000-4-11**

Voltage Dips, Short Interruptions and Voltage Variations Immunity Test



## **Declaration of Conformity**

**Manufacturer:** ServerLIFT LLC  
17453 N 25th Ave  
Phoenix, AZ 85023 USA  
602-254-1557  
www.serverlift.com

**Model numbers:** SL-500X®, SL-500XI™, SL-500FX™, SL-500FXI™

**Max. Load Capacity:** 227 kg (500 lbs)

**Type of equipment:** Server and IT equipment lifting machine

We declare that the product identified above meets the requirements of the following EU directives and standards for the purpose of CE compliance:

### **Emissions Standards**

#### **IEC/EN 61000-6-4: 2018**

Generic Standard - Emission standard for Industrial Environments

#### **CISPR 32 / CISPR 11 Radiated Emissions**

#### **CISPR 32 / CISPR 11 Conducted Emissions**

### **Product Safety Directives**

#### **Machinery Directive 2006/42/EC**

#### **Low Voltage Directive (LVD) 2006/95/EC, IEC EN 60950**

Name: Mr. Raymond Zuckerman

Title: CEO

Date: 09/05/2018



## **Declaration of Conformity**

**Client:** ServerLIFT LLC

**Model numbers:** SL-500X®, SL-500XI™

**Type of equipment:** Lifting device for IT equipment for use in data centers

**Manufacturer:** ServerLIFT LLC  
17453 N 25th Ave, Phoenix, AZ 85023 USA  
602-254-1557

**Report Date:** March 1 and 4, 2019

**Test Performed By:** Compatible Electronic Inc.  
20621 Pascal Way  
Lake Forest, CA 92630  
Ph: 949-587-0400

**Report Date:** FCC Part 15B, Class A

### **FCC 15.19(a) (3):**

This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Name: Mr. Raymond Zuckerman

Title: CEO

Date: 01/17/2020



**ServerLIFT®**

---

[www.serverlift.com](http://www.serverlift.com)

© ServerLIFT Corporation. All Rights Reserved.

SL, ServerLIFT, SL-1000X, SL-500X, SL-500FX, SL-350X, and TouchSTOP  
are trademarks of ServerLIFT Corporation